Canon

Memory Full Instruction Canon imageRUNNER C38xx/ C58xx

If the following messages appear at the bottom of the screen on the printer:

Status Monitor 🔒 🧇 Printer	PDL PCL Work Memory Full
🞯 Status Monitor 🔒 🗳 Printer	Check the Status Monitor screen.

Click on the "Status Monitor" in the bottom left of the printer display.



The screen below will appear. Press "Cancel".

	🗊 Сору	🔁 Scan	Secure Print	uniFLOW Online Setup	Menu	Energy Saver	🕞 Log Out	
				Settings/ Registration	亩 Home			
				1	2 ABC	3 Def		
			4 _{GHI}	5 JKL	6 ^{MNO}			
A printer error occurred. Check the status in Print under Status Monitor.		7 PQRS	8	9 wxyz				
			*	0	#			
			С	🥢 Reset				
							rt	Stop
Cancel		Close	L			¢	>	
🚳 Status Monitor 🔒 🧇 Prin	nter	PDL PCL Wo	ork Memory Full					123

The print job with the error is now deleted.

Please check your document in the print queue and try to print again.