 


Memory Full Instruction Canon imageRUNNER C257

When the printer stops printing and the status notification remains on **“Waiting to print...”** (visible in the bottom of the printer display):



Please turn the switch on the right side of the printer OFF and ON again.



The printer will now restart and will be ready to use after 5 minutes.